





For the Legacy MPMS systems, the serial number is on the inside rear door.



For the MPMS XL, the serial number is located on the bottom rear near the incoming power.

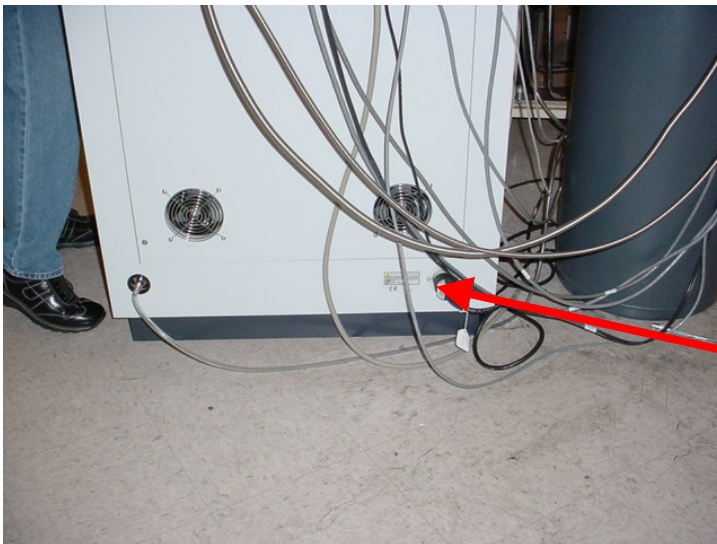

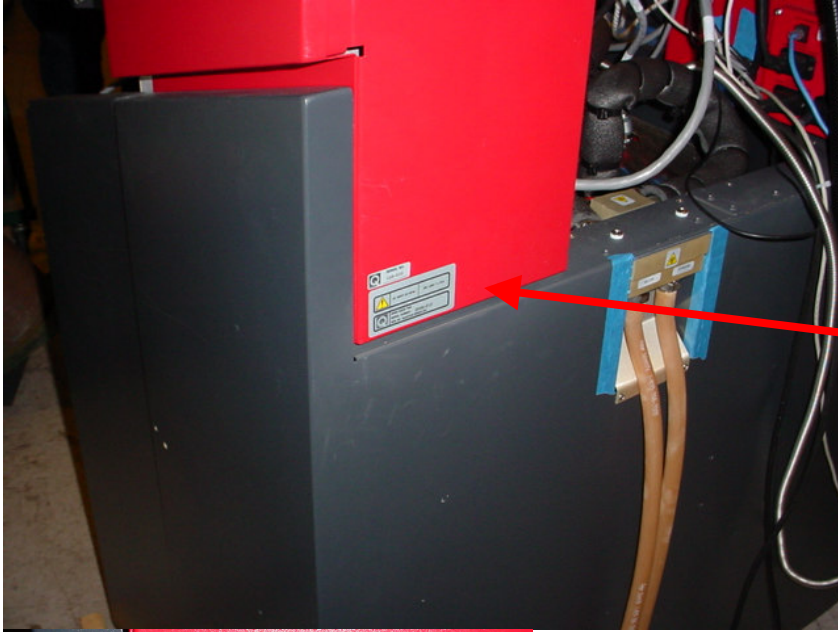

For the Squid VSM, the serial number is located on the rear of the tower.

